


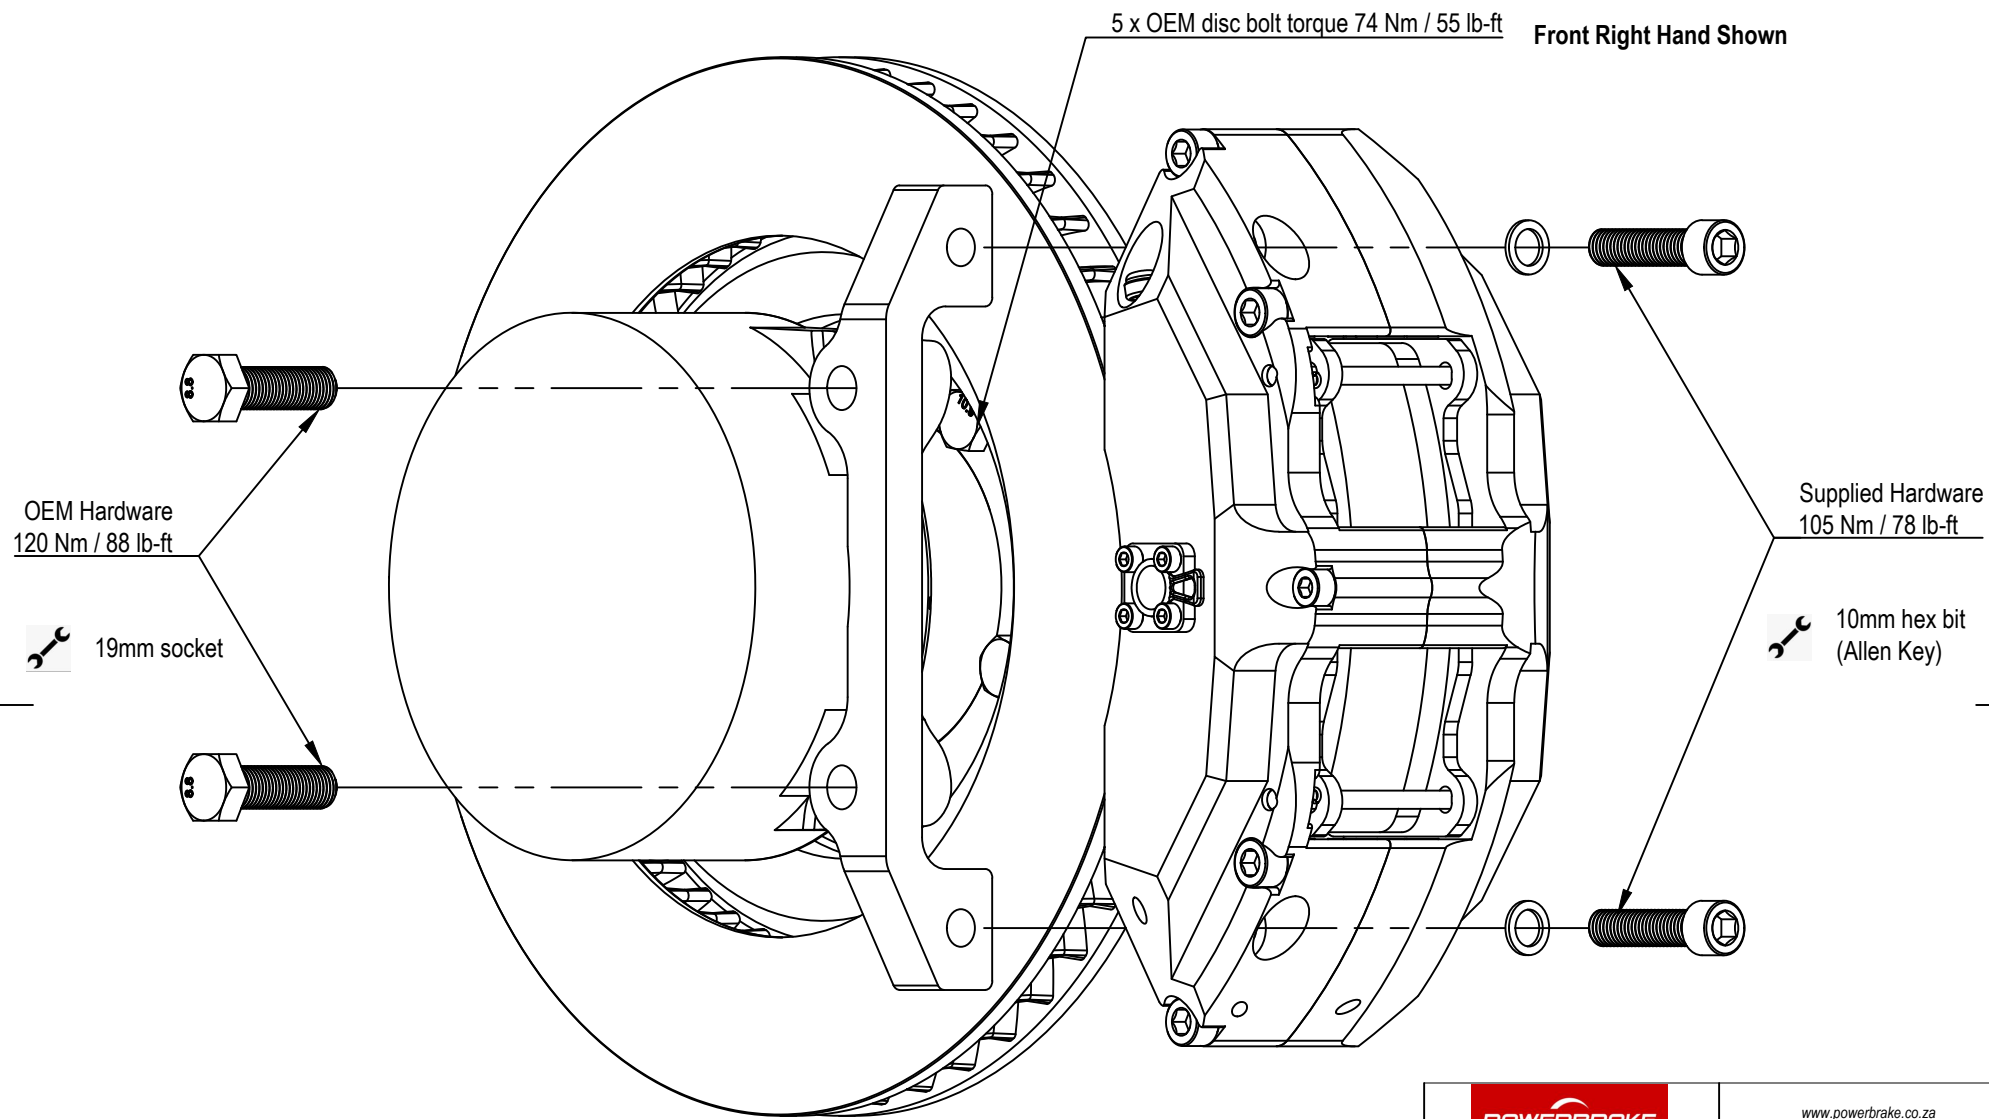

		www.powerbrake.co.za www.powerbrakeglobal.com	
Assembly diagram for bracket orientation and torque specs			
DATE:	2022/03/24		
VEHICLE:	Toyota Land Cruiser 79, 78, 76		(M14)
KIT:	X6M / 350x34mm Stage-1		
PLATFORM CODE:	TOY08F		
Observe required torque specifications using an appropriate torque wrench / Do not use thread lockers on caliper mounting bolts			

Brake Pad Replacement Part Numbers	
Manufacturer	Part #
FMSI	D1116
Powerbrake PB01	5001-PB01
Powerbrake PB05	5001-PB05
Endless	RCP112xx
G-Loc	GP1365
Bendix Australia	DB1845U
Mintex	MDB3115
Mintex (Alternative)	MDB3116 (lower friction)
Ferodo (Street)	FDB4212 or FDS4212
Ferodo (Race)	FRP3100
Hawk Performance	HB616x.607
Hella Pagid (Street)	8DB 355 019-521
Pagid (Race)	8005
Febi Bilstein	116138
PFC	9195

*xx Designates manufacturer's friction compound. Select appropriate compound for application.
Contact our Sales Office for more info if required.*

Spare Part Numbers	
Description	Part #
Disc / Rotor Pair 350X34mm Stage-1	AT483
Caliper Seal Kit *	CSK-xx/xx/xx-O

** xx/xx/xx refers to the piston sizes of your X-Line caliper - lasered onto the inboard face of caliper body*