


## How to use this template:

1. Print "**Actual size**" (no scaling) with paper size set to A4 Landscape.
2. Glue this page onto a suitable piece of cardboard.
3. Cut along the outline below. *This is a 2.5mm clearance gap required for the brake system to fit under your wheel.*
4. Remove a wheel and lay it face down.
5. Fit the "Wheel Spigot" section into your wheel's center hole.
6. Check that the template cutout clears the wheel surfaces to ensure sufficient clearance for the new brake system. *Take careful note of balancing weights.*

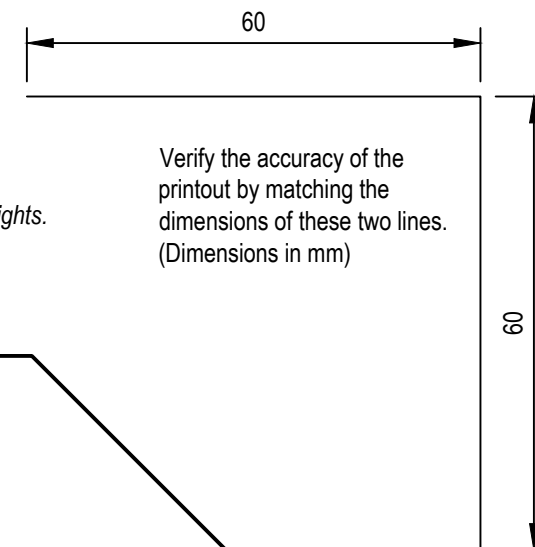

**POWERBRAKE**

Powerbrake: X6M / 350x34mm  
Vehicle: Ford Ranger III, Everest & Mazda BT50  
Platform: FSA01F

Wheel Spigot 93.1mm



|                                                                                                              |                                        |                                                                |
|--------------------------------------------------------------------------------------------------------------|----------------------------------------|----------------------------------------------------------------|
|                         |                                        | <a href="http://www.powerbrake.co.za">www.powerbrake.co.za</a> |
| WHEEL FITMENT TEMPLATE                                                                                       |                                        |                                                                |
| VEHICLE:                                                                                                     | Ford Ranger III & Mazda BT50 ('04-'11) |                                                                |
| KIT:                                                                                                         | X6M / 350x34mm Stage-1                 |                                                                |
| PLATFORM CODE:                                                                                               | FSA01F                                 |                                                                |
| It is critical to accurately check wheel clearance with this template before purchasing your Powerbrake kit. |                                        |                                                                |