
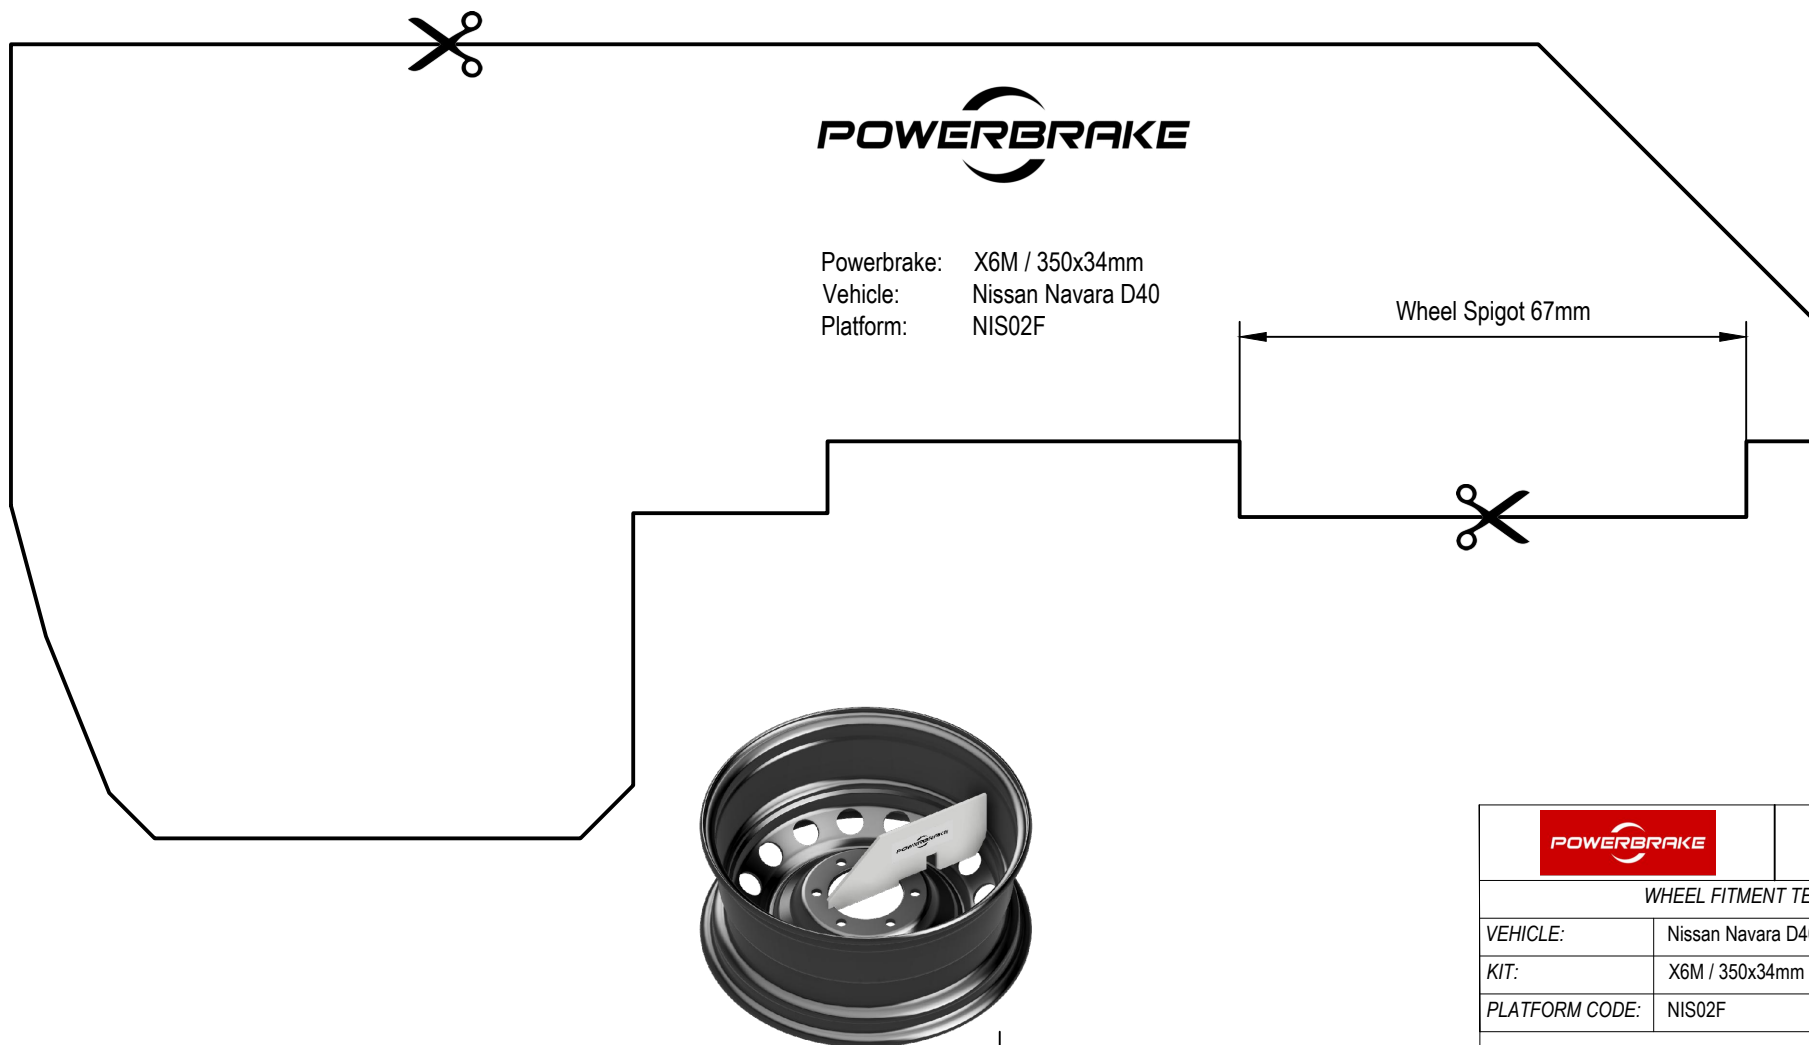


How to use this template:

1. Print "**Actual size**" (no scaling) with paper size set to A4 Landscape.
2. Glue this page onto a suitable piece of cardboard.
3. Cut along the outline below. *This includes a 2.5mm clearance gap required for the brake system to fit under your wheel.*
4. Remove a wheel and lay it face down.
5. Fit the "Wheel Spigot" section into your wheel's center hole.
6. Check that the template cutout clears the wheel surfaces to ensure sufficient clearance for the new brake system. *Take careful note of balancing weights.*

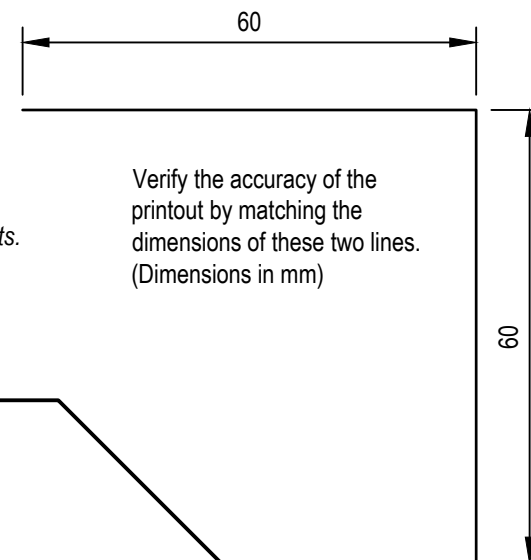

		www.powerbrake.co.za
WHEEL FITMENT TEMPLATE		
VEHICLE:	Nissan Navara D40 EU-spec	
KIT:	X6M / 350x34mm	
PLATFORM CODE:	NIS02F	
It is critical to accurately check wheel clearance with this template before purchasing your Powerbrake kit.		