


How to use this template:

1. Print "**Actual size**" (no scaling) with paper size set to A4 Landscape.
2. Glue this page onto a suitable piece of cardboard.
3. Cut along the outline below. *This includes a 2.5mm clearance gap required for the brake system to fit under your wheel.*
4. Remove a wheel and lay it face down.
5. Fit the "Wheel Spigot" section into your wheel's center hole.
6. Check that the template cutout clears the wheel surfaces to ensure sufficient clearance for the new brake system. *Take careful note of balancing weights.*

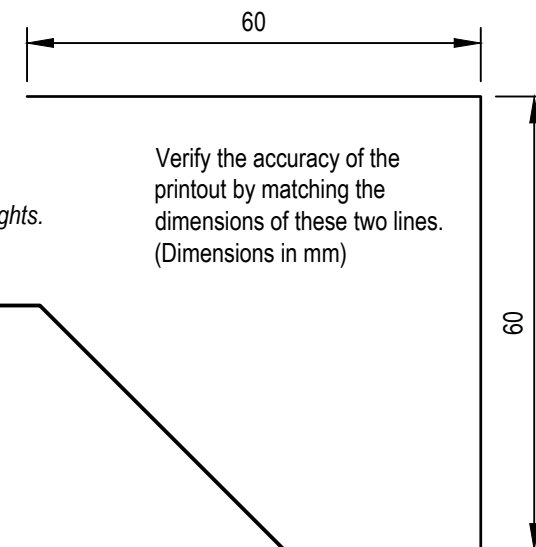

POWERBRAKE

Powerbrake: X6L / 370x34mm
Vehicle: Toyota Land Cruiser 200 & Lexus LX 570
Platform: TOY05F & TOY09F

Wheel Spigot 110mm



		www.powerbrake.co.za
WHEEL FITMENT TEMPLATE		
VEHICLE:	Toyota Land Cruiser 200 & Lexus LX 570	
KIT:	X6L / 370x34mm	
PLATFORM CODE:	TOY05F & TOY09F	
It is critical to accurately check wheel clearance with this template before purchasing your Powerbrake kit.		