


How to use this template:

1. Print "Actual size" (no scaling) with paper size set to A4 Landscape.
2. Glue this page onto a suitable piece of cardboard.
3. Cut along the outline below. This includes a 2.5mm clearance gap required for the brake system to fit under your wheel.
4. Remove a wheel and lay it face down.
5. Fit the "Wheel Spigot" section into your wheel's center hole.
6. Check that the template cutout clears the wheel surfaces to ensure sufficient clearance for the new brake system. Take careful note of balancing weights.

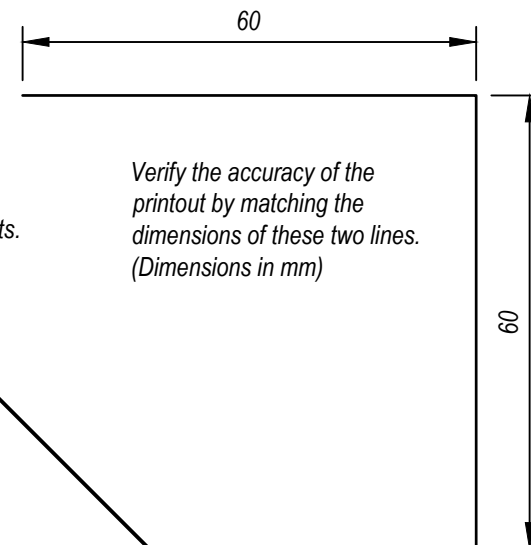

POWERBRAKE

Powerbrake: X6S / 330x33mm
Vehicle: Toyota Land Cruiser 79
Platform: TOY08F & TOY02F

Wheel Spigot = 110mm



		www.powerbrake.co.za	
WHEEL FITMENT TEMPLATE			
VEHICLE:		Toyota Land Cruiser 79, 78, 76	
KIT:		X6S / 330x33mm	
PLATFORM CODE:		TOY08F & TOY02F	
It is critical to accurately check wheel clearance with this template before purchasing your Powerbrake kit.			